

## **ASSEMBLY INSTRUCTIONS** Model 2523 Plastic Cart

**Parts Included** 

| Qty | Description   |
|-----|---------------|
| 1   | Top Shelf     |
| 1   | Botton Shelf  |
| 4   | Leg           |
| 2   | Swivel Caster |
| 2   | Fixed Caster  |
| 4   | Leg Set Screw |
| 16  | CasterScrew   |
| 16  | Caster Nut    |
| 16  | Lock Washer   |
|     |               |

**Tools Required** Phillips Head Screwdriver Slot Head Screwdriver 1/2" (13 mm) Open-end Wrench



## Assembly

- 1. Place **Top Shelf** (with push handle) bottom side up on floor. (Figure 1).
- 2. Position one Leg with peg end down into one corner receptical of Top Shelf. Long edge of shelf pad must be parallel to long edge of shelf (Figure 2).
- 3. Secure Leg to Shelf with a phillips head screw. (Figure 3)
- 4. Repeat Steps 2 and 3 for three other legs.
- 5. Lower the **Bottom Shelf**, bottom side up, over legs so shelf corners seat properly on legs (Figure 4).
- 6. Place a Swivel Caster onto shelf corner/leg on the handle end of the cart (Figure 5). Note: Positioning of swivel and fixed casters may be reversed if desired. Be sure to position both swivel casters on one end of cart, either handle end or opposite handle end.
- 7. Secure caster plate to cart corner with four screws, lock washers, and nuts (Figure 6). Insert screws up through holes in leg, shelf and caster plate. Add lock washer and nut. Insert all four screws and add washers/nuts before tightening all with wrench.
- 8. Repeat Steps 6 and 7 for other Swivel Caster.
- 9. Repeat Steps 6 and 7 for Fixed Casters on other corners of cart.

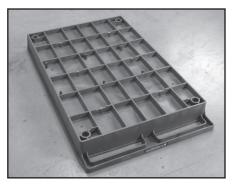


Figure 1

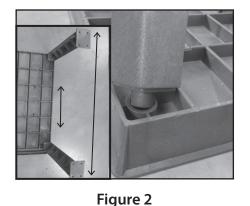








Figure 4



Figure 6

4900 W Electric Ave · West Milwaukee WI USA · 800.558.8565 · Email - info@eLakeside.com · www.eLakeside.com

Figure 5

© 2011 Lakeside Manufacturing, Inc.