



Operation Manual
For
Panini Machines
Models - Savoy, Panini, Majestic, Diablo



100 Niantic Avenue – Suite 104 • Providence, Rhode Island 02907 • U.S.A.
Tel: (401) 273-3300 Fax: (401) 273-3328
Website: www.equipex.com e-mail: service@equipex.com



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all the instructions before use.
2. Do not touch hot surfaces; use handles or knobs.
3. To avoid electric shock, **do not immerse the power cord, or any part of the unit**, in any liquid.
4. Close supervision is necessary when any appliance is used, especially around children.
5. Unplug appliance from the electrical outlet when not in use, and before cleaning. Allow appliance to cool before installing or removing any parts or accessories, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or if appliance should sustain damage, or malfunction in any way. In this event, return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessories and/or attachments not recommended by the appliance manufacturer may cause injury or damage to the appliance, and may void your warranty.
8. Do not use outdoors.
9. Do not allow the power cord to hang over the edge of a table or counter, or to be exposed to hot surfaces, as damage may occur.
10. Do not place appliance on or near a burner, or in a heated oven.
11. To disconnect an appliance, **first** turn all controls to the '**off**' position *then* unplug the power cord from the wall outlet.
12. Do not use appliance other than for its intended use.
13. **The warmer must be plugged into a dedicated circuit of the proper ratings.**
14. **SAVE THESE INSTRUCTIONS FOR LATER USE!**

INTRODUCTION

The **SODIR** PANINI GRILLS — Models SAVOY, PANINI, MAJESTIC and DIABLO — are uniquely designed to offer quality cooking. These units are constructed of food service quality stainless steel, and use fine grain cast iron top and bottom cooking surfaces. The grills are versatile in application and easy to operate. The moveable top is spring counterbalanced with adjustable tension on the handle. Top and bottom heating elements are thermostatically controlled up to 570 F. The units come equipped with a removable front drip tray and a handy scraper. All models are available with grooved, flat or mixed grill plates.

Specifications:

Model	Electrical	NEMA Plug
SAVOY	120V, 1.75 KW, 14 Amps	5-15 P
PANINI	120V, 1.75KW, 14 Amps 208/240V, 1PH, 3KW, 12/14 Amps	5-15 P 6-15 P
MAJESTIC	208/240V, 1PH, 4KW, 16/18 Amps	L6-30 P
DIABLO	208/240V, 1PH, 6.5KW, 24/27 Amps	6-50 P

OPERATION

Initial Set-up

The grill is shipped with an application of machine oil on the upper and lower grill plates. This oil will need to be removed prior to the seasoning process using a mild soap and water solution.

Before operating your **SODIR** Panini grill, we recommend that you season the surface of the grill plates with cooking oil or shortening. For seasoning, wipe cooking oil or shortening onto the upper and lower grill plates using a clean, lint-free cloth, or coat the plates with cooking oil spray. Turn the grill on with the integrated ON/OFF switch(s)/thermostat(s) and set the thermostat(s) to 400° F. When the grill reaches the set temperature, the orange indicator light will go out. Allow the grill to season for 10-15 minutes and then let the grill cool. It is normal for some smoke to appear during this process. Wipe off the excess oil using a clean, lint-free cloth. Repeat seasoning process at least one more time. Congratulations, your grill is now ready for use!

Preheating

After the grill plates have been properly seasoned, turn the grill on using the integrated ON/OFF switch(s)/thermostat(s) (the green light(s) will go on) and turn the temperature control knob(s) to the desired temperature. The orange light(s) will go on and stay on until the desired temperature is reached. The orange light(s) will then go out. The preheat time will vary depending on the cooking temperature settings and the electrical specifications of your model. It will normally take 10-15 minutes for your grill to reach cooking temperature. After reaching the set temperature, the orange light(s) will cycle on and off as the thermostat cycles, to maintain temperature. The green light(s) remain on until the unit is shut off.

Cooking

SODIR Panini grills can be used for a wide variety of foods. Following are some suggested guidelines for foods frequently cooked on this grill. Cooking times will vary depending on the food products, temperature settings and desired results.


<u>Sandwich</u>	Temperature:	400-450° F
	Time:	2-3 minutes
<u>Wrap</u>	Temperature:	375-450° F
	Time:	1-2 minutes
<u>Chicken Breast</u>	Temperature:	475-500° F
	Time:	2-3 minutes
<u>Beef Steak</u>	Temperature:	475-550° F
	Time:	2.5-4.5 minutes
<u>Burger</u>	Temperature:	500-550° F
	Time:	2-4 minutes

Adjusting Handle Tension

WARNING: Disconnect (unplug) electrical power supply before servicing

Allow the grill to cool. Remove the spring protection cover at the top rear of the unit by unscrewing the two T-15 Torx screws and then pulling it up. With a T-25 Torx screwdriver, tighten or loosen the screws on the handle straps until the desired tension is achieved. There are four (4) screws for each top plate, two (2) on each side. Re-install the spring protection cover prior to use. *See attached drawing.*

PANINI GRILL REAR TOP VIEW

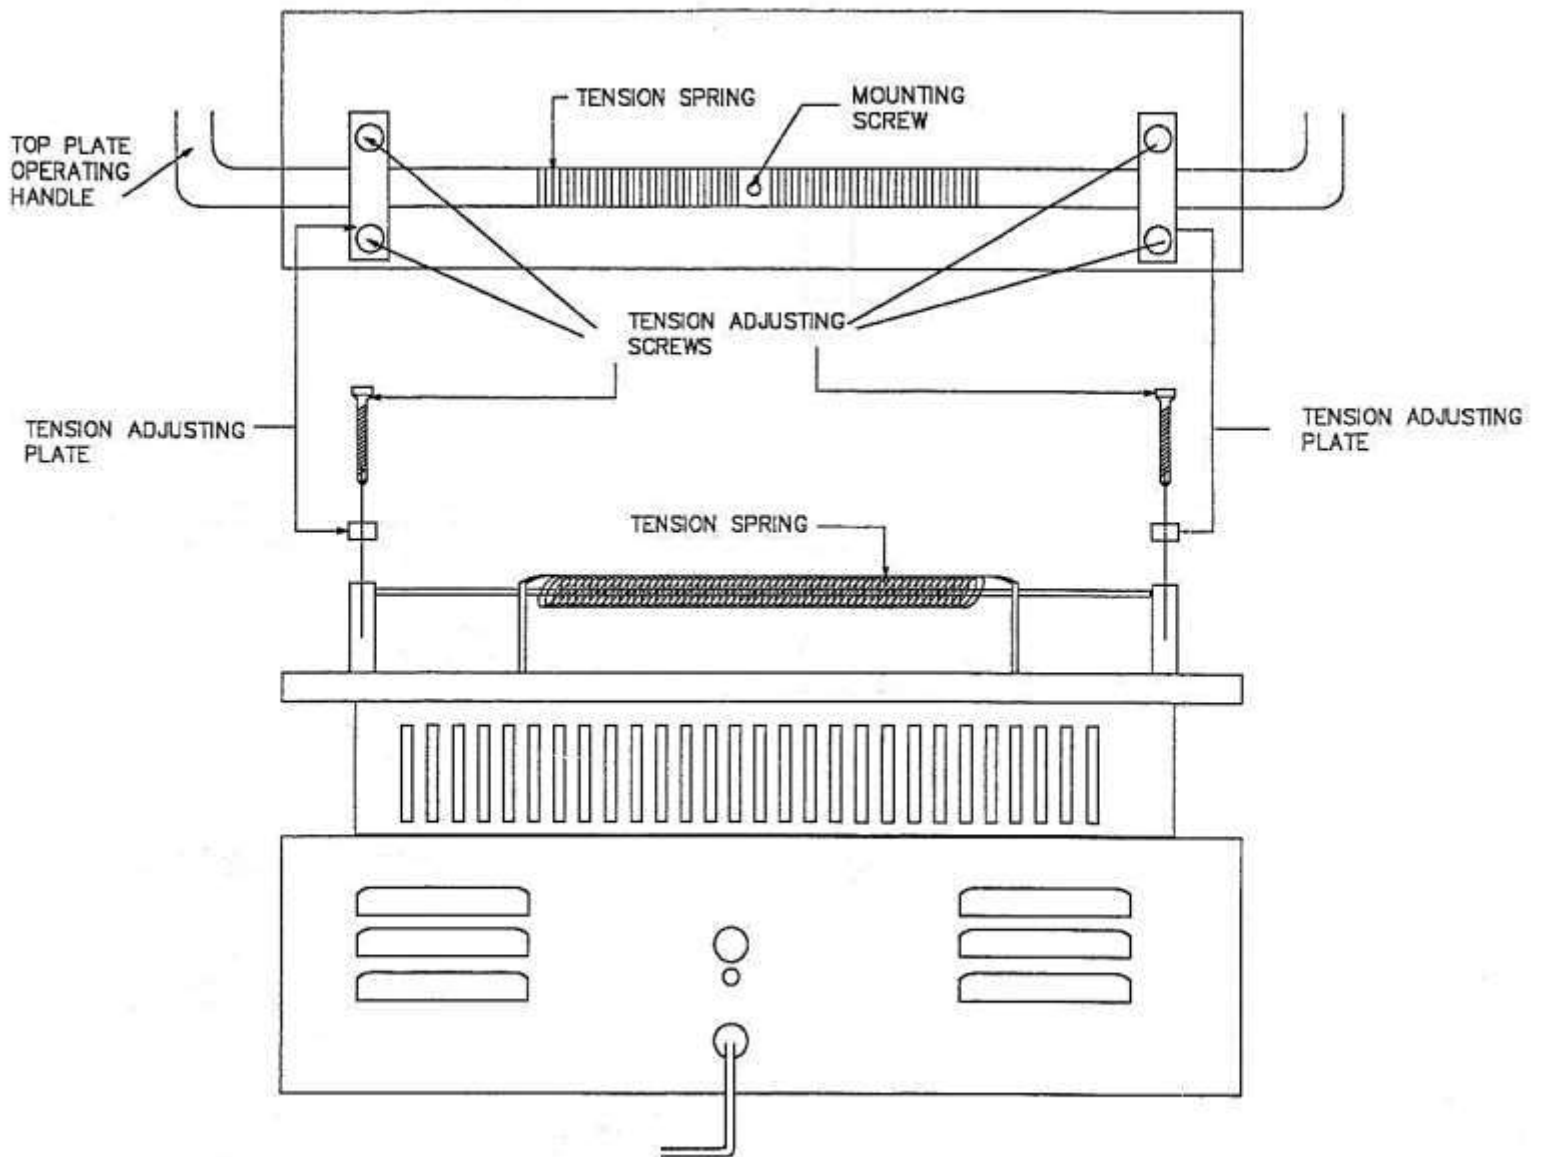

PANINI GRILL REAR VIEW

CLEANING

WARNING: Disconnect (unplug) electrical power supply before cleaning

Allow the grill to cool before cleaning. Using the scraper provided or a stiff wire brush, scrape the debris from the upper and then lower grill plates. To clean the grill, scrape or brush the debris toward yourself and into the removable drip tray. Use a cloth dampened slightly with a soap and water mixture to clean the stainless-steel housing, upper grill covers, spring protection cover and the drip tray. Clean the grill thoroughly at the end of each day. Failure to do so may cause hard to remove build up. In order to remove the build up from the grill plates, use industry standard food service grade degreasers or grease removers. We do not recommend using soap and water to clean the grill plates, however, if soap and water are used, the grill will need to be re-seasoned (see below). For tough to remove carbon buildup, use a commercially available carbon remover.

DO NOT spray the unit with any cleaning liquid before unplugging it
DO NOT allow water to drip into the housing or around the electrical components
DO NOT immerse in water for cleaning
DO NOT attempt to clean display until cool


RESEASONING

It may be necessary to re-season the grill after extended use and cleaning. In order to do so, clean both plates of the grill with a clean, lint-free cloth and scraper. Apply cooking oil or shortening onto both plates with a lint-free cloth or coat the plates with a cooking oil spray. Wipe off excess oil with a dry, clean cloth. Turn the grill on and set the thermostat to 400 F. Some smoking may occur during the re-seasoning process. When the grill reaches the desired temperature (the orange light will go out), turn the grill off and allow it to cool. Wipe off the excess oil from the surface of the plates. Repeat the re-seasoning process one more time. The grill is now re-seasoned and ready to use.

You should inspect all parts on a regular basis to ensure that all is in proper working order. If a part is damaged, have the unit repaired by an authorized service agency prior to returning the unit to operation. If you have trouble locating a service agency in your area, please consult our website at <http://www.equipex.com/>, or call us at 1-800-649-7885 and ask for customer service.


Please be advised that Models MAJESTIC and DIABLO are subject to on-site service under the terms of our warranty, while Models SAVOY and PANINI shall be carried-in for service.

Savoy, Panini 120V

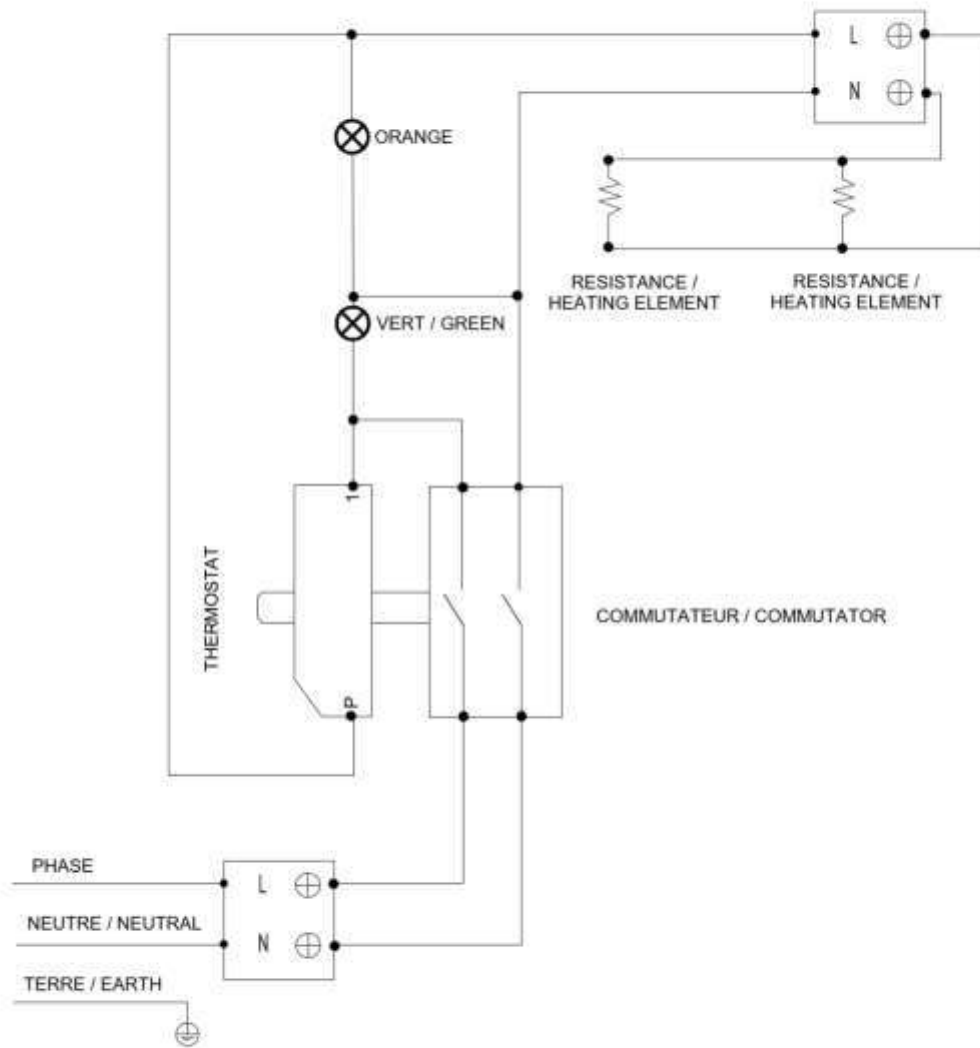


Câblage : C02001

PANINI 220V

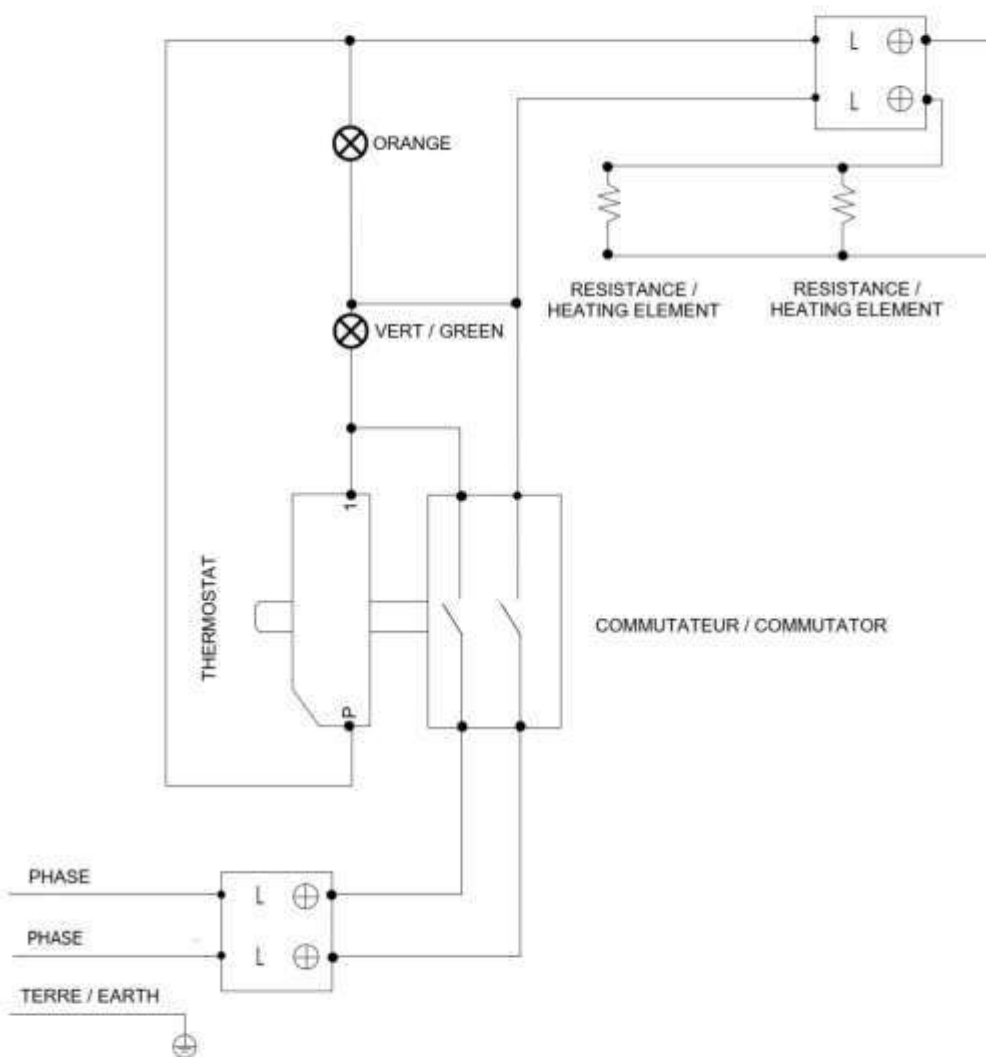


Câblage : C02001


MAJESTIC, DIABLO 220V

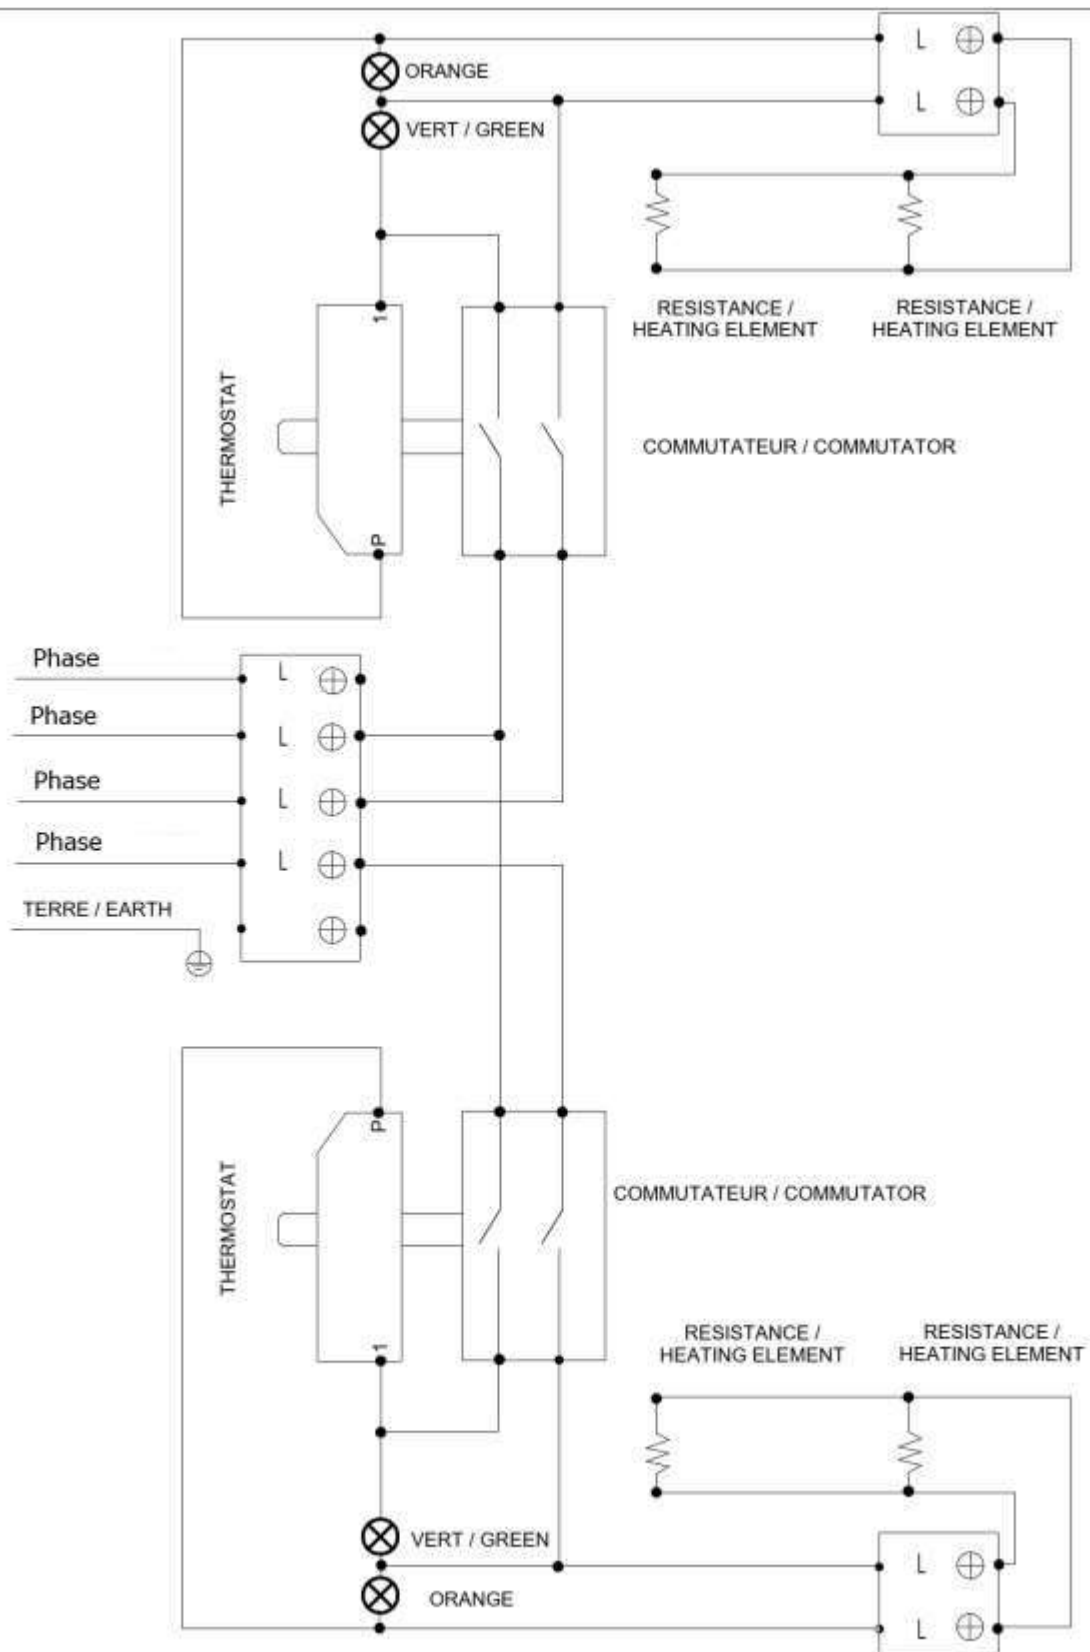


SAVOY

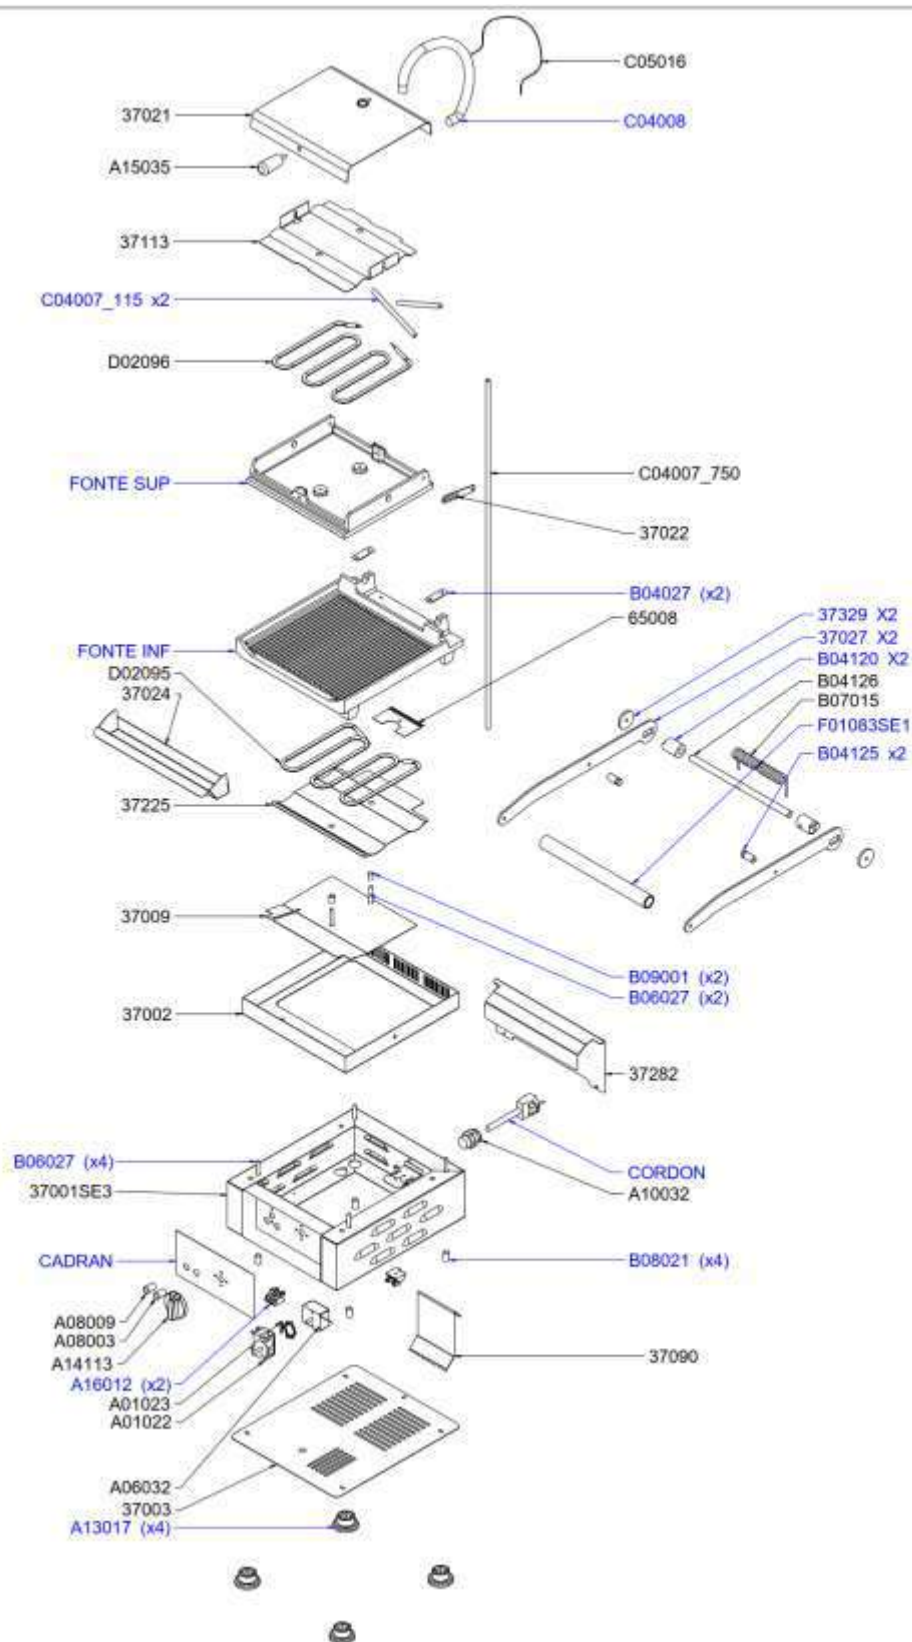


PANINI

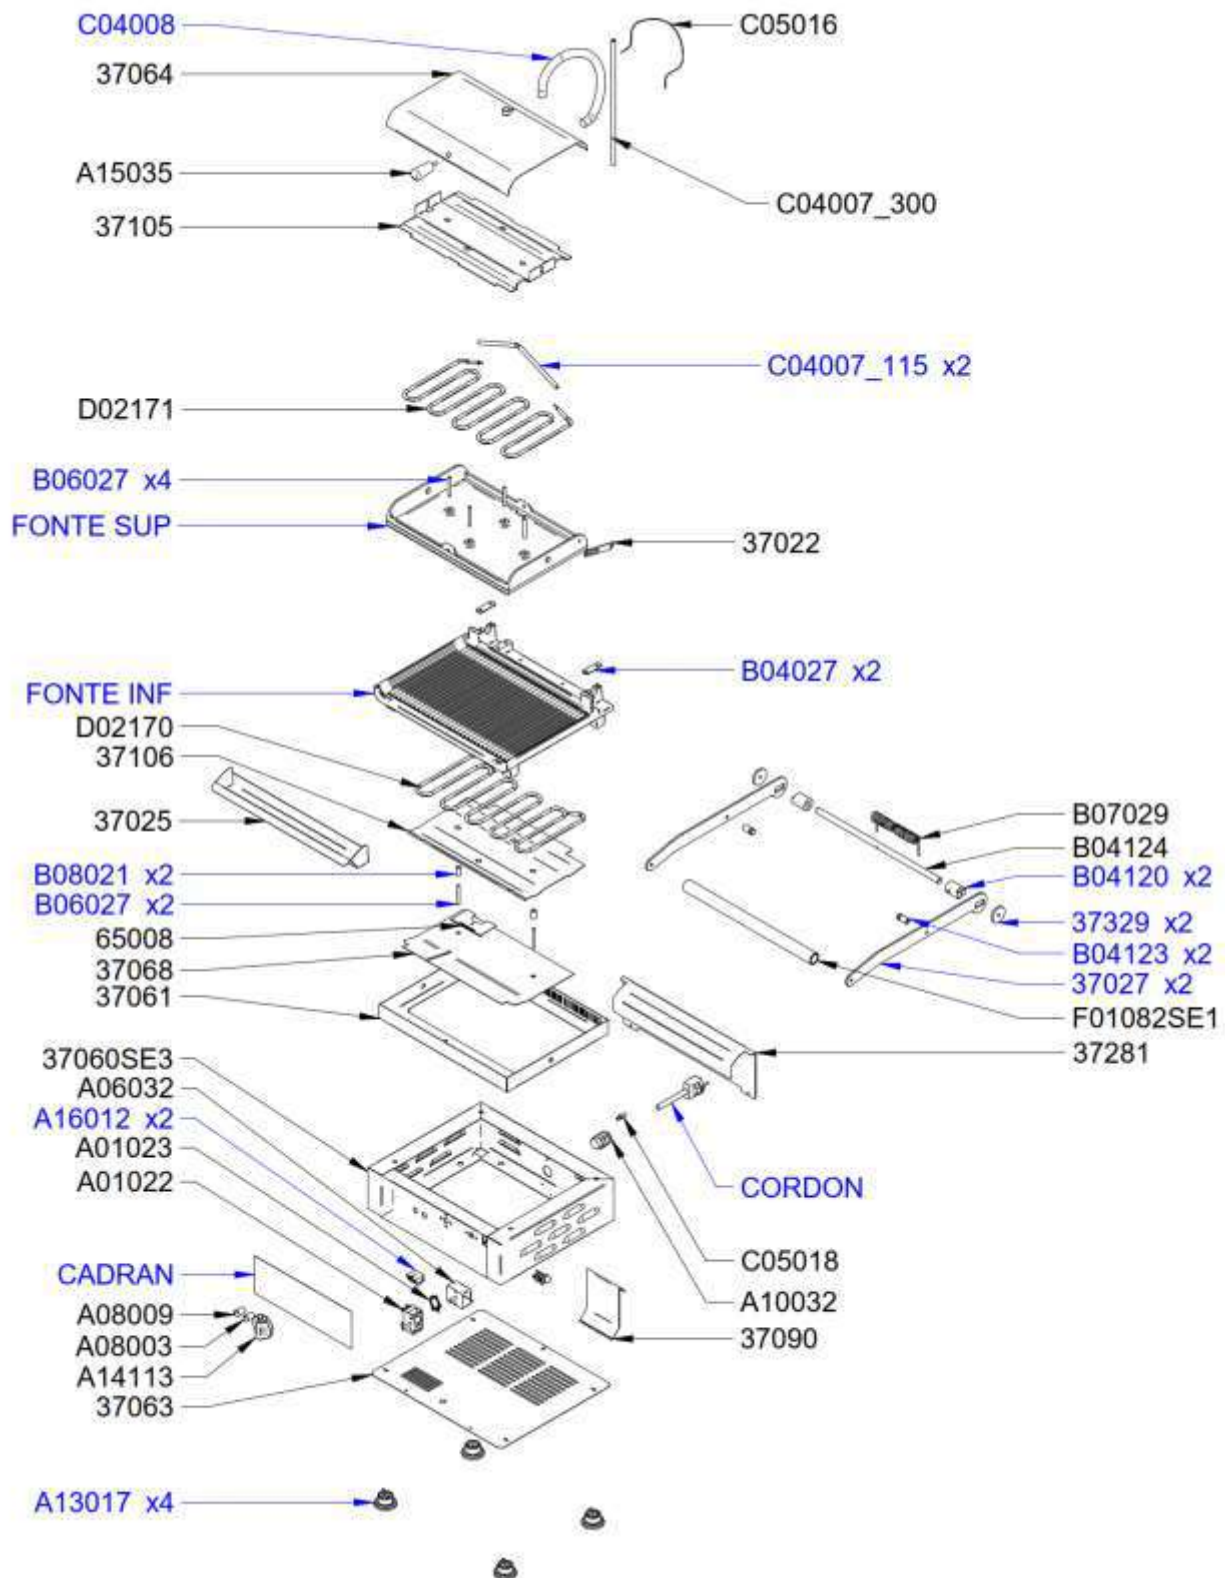

MAJESTIC

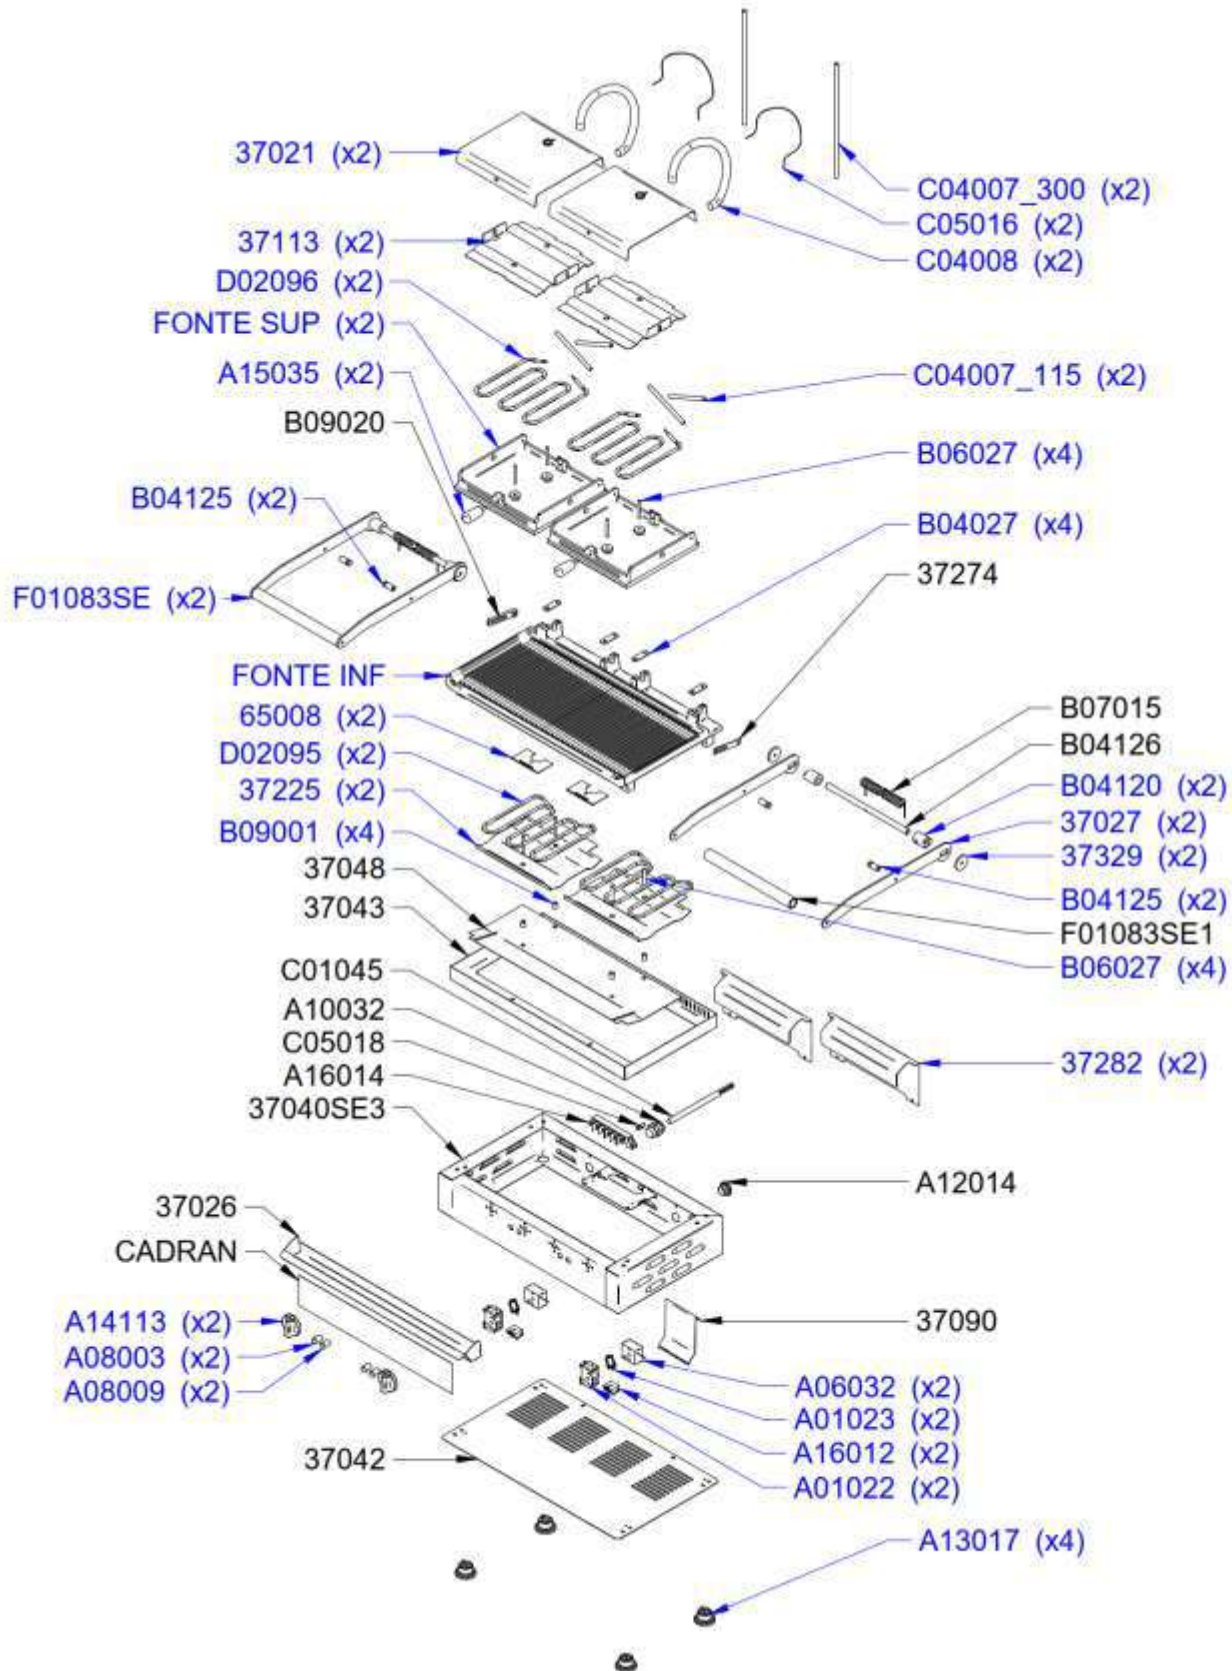

DIABLO

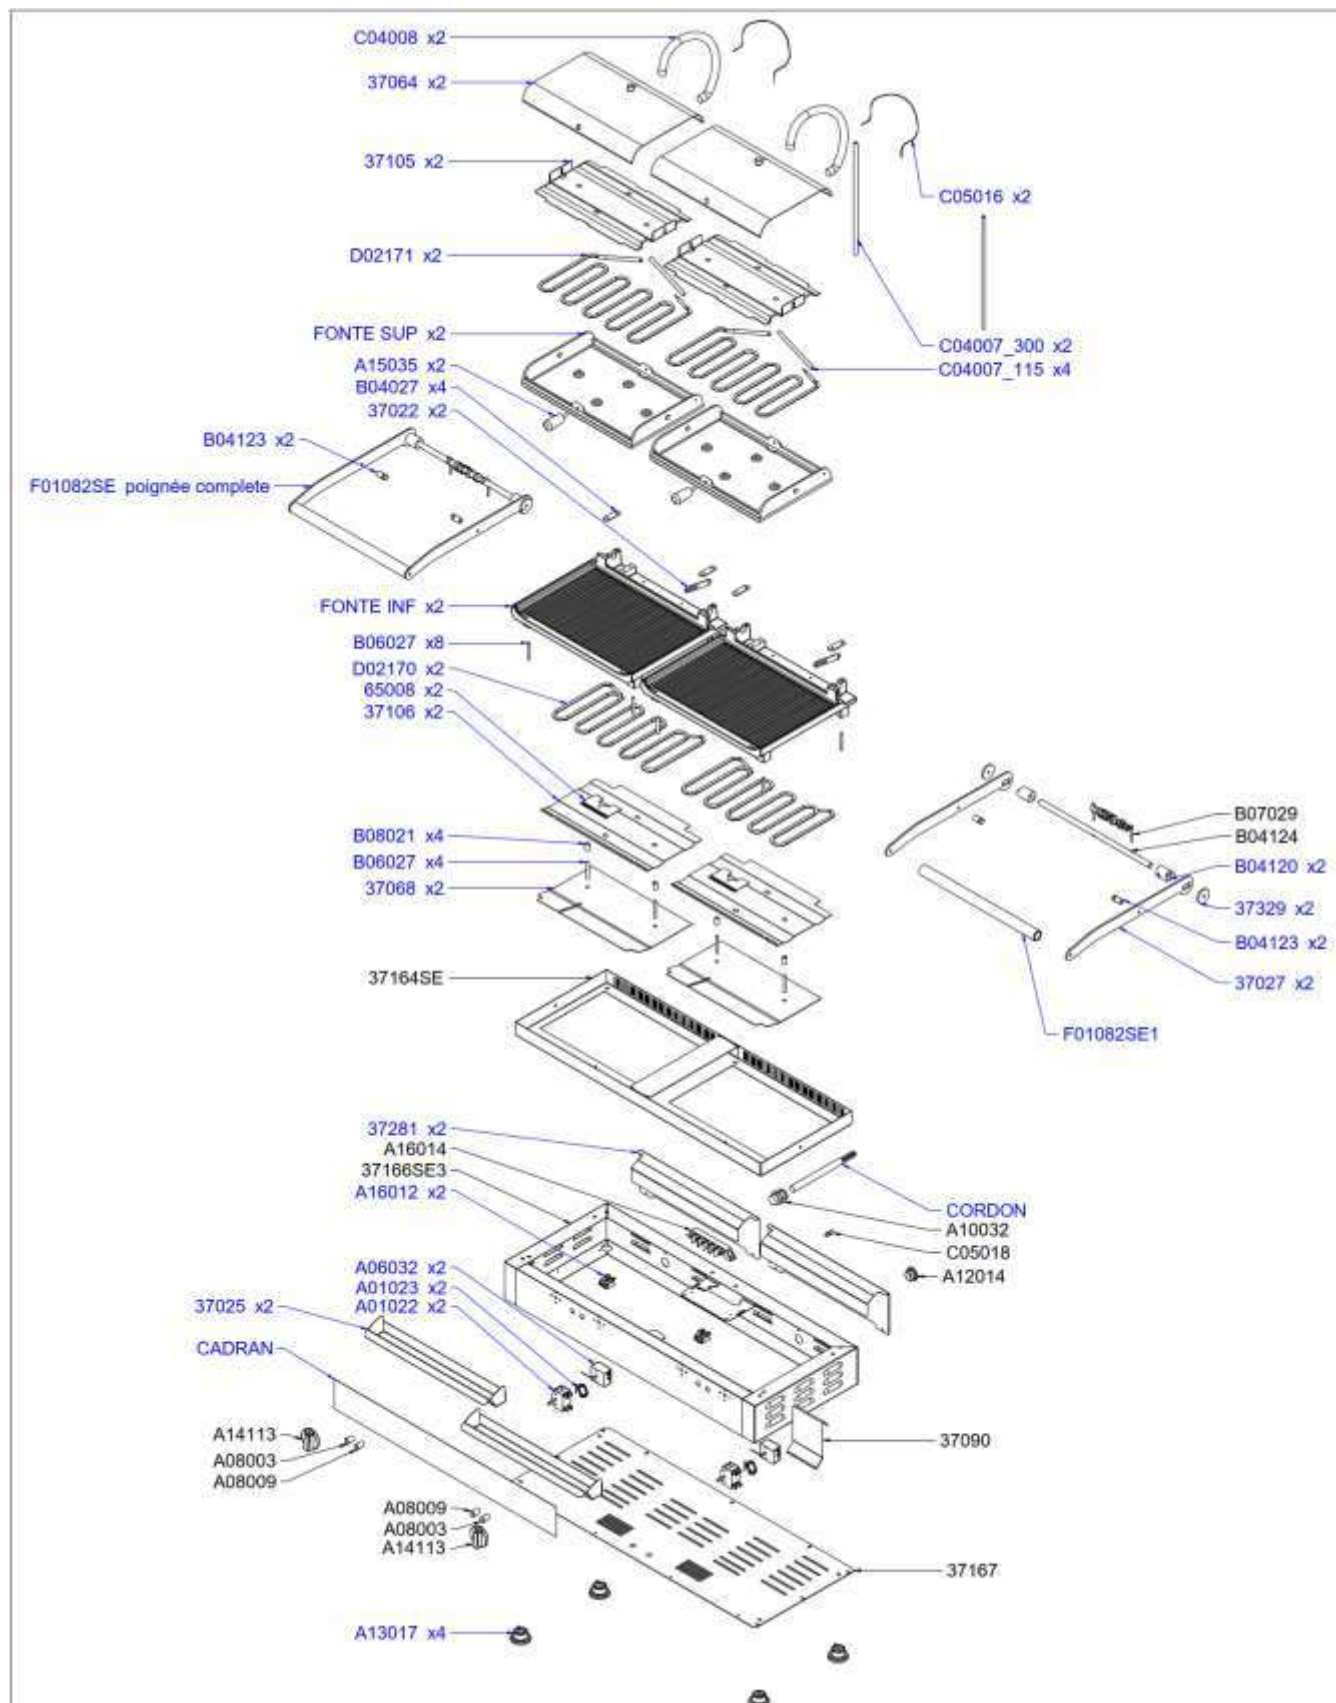



LIMITED WARRANTY

Your new **EQUIPEX** product is warranted to the original purchaser for a period of one year from the date of purchase.

This limited warranty is against defects from original factory imperfections in material and/or workmanship and includes labor for replacement of defective parts, provided repairs are performed by an authorized service agency. Our obligation under this warranty is limited to repairing or replacing any part or parts thereof. The CUSTOMER must inform the Service Agency of warranty coverage and provide a copy of the dated sales or delivery receipt BEFORE WARRANTY REPAIRS BEGIN. Replacement parts and accessories are warranted for ninety (90) days from the date of purchase when purchased separately and will be verified by dated sales receipt or packing slip for that item. All parts or accessories replaced under warranty must be returned to the Service Agency.

This warranty applies only to equipment under normal use and service in the U.S.A. and Canada. It does not apply to any item which has been repaired or altered in any way so as, in the judgment of EQUIPEX, to affect its reliability.

THE FOLLOWING ARE NOT COVERED UNDER WARRANTY:

1. Damage caused by abuse, misuse or dropping or other similar incidental damage caused by, or as a result of, customer failure to follow assembly, operation, cleaning, user maintenance or storage instructions.
2. Labor to replace inoperative parts such as bulbs, plugs or racks due to normal wear and tear or abuse.
3. Materials or labor to repair scratched, stained, chipped, pitted, dented or discolored surfaces, attachments or accessories.
4. Transportation charges to or from a service agency for repair of your machine. If you should have questions relating to this issue, please call **Equipex** at 1-800-649-7885.
5. Labor charges to install or test attachments or accessories, which are replaced for any reason.
6. SHIPPING DAMAGES. Visible and hidden damages are the responsibility of the freight carrier. The consignee must file the claim promptly against the carrier. KEEP ALL ORIGINAL CONTAINERS AND PACKAGING MATERIAL FOR CARRIER INSPECTION.
7. Products placed or stored in the equipment are not subject to this warranty and no responsibility is assumed thereof.

THIS WARRANTY IS GIVEN EXPRESSLY AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, FOR MERCHANTABILITY AND FOR FITNESS TOWARD A PARTICULAR PURPOSE AND CONSTITUTES THE ONLY WARRANTY MADE BY EQUIPEX, LLC. IT NEITHER ASSUMES, NOR AUTHORIZES ANY PERSON TO ASSUME FOR US, ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE SUBJECT EQUIPMENT.

For service, please call **EQUIPEX** at 1-800-649-7885, menu option #

100 Niantic Avenue – Suite 104 • Providence, Rhode Island 02907 • U.S.A.

Tel: (401) 273-3300

Fax: (401) 273-3328

Website: www.equipex.com

e-mail: service@equipex.com